

USB Interface Plus Reader **Instructions For Use**

For more information, contact our client services group at 800-843-8367.



Product Overview


The USB Interface Plus Reader provides the communications link between a TempTale4 monitor and a standard USB port. It is used for downloading time-and-temperature data recorded by the monitor to your PC for viewing, analysis and archiving.

Minimum System Requirements


- PC with Microsoft Windows Requirements 2000 Professional(Service Pack 4 or above) or XP Professional (Service Pack 2 or above)
- CD-ROM drive
- USB port
- One or more of the following Sensitech applications:
 - TempTale Manager Desktop
 - ColdStream Cold Chain Manager Enterprise

Connecting the USB Interface Plus and USB Driver Installation

1. Insert the USB Interface Plus Driver CD into the CD-ROM drive.
2. Connect the “B” end of the USB Cable to the USB Interface Plus. (See first image at right.)
3. Connect the “A” end of the USB cable to a USB port on your PC. (See second image at right.)
4. At the “Found New Hardware” Wizard screen select “Next”. (See screenshot at right below.)
5. Select the “Search for suitable driver for my device (recommended)” radio button and click “Next”.
6. Make sure the CD-ROM Drive option is selected then click “Next”.
7. At the “Device Driver Found” screen click “Next”.
8. Click “Finish” at the “New Hardware Device Found” screen.
9. You will see the "Found New Hardware" message again.
10. Repeat steps 4-8 to install 2nd file required for USB Interface Plus operation.
11. The USB Interface Plus is now ready to use.

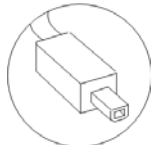

USB “B” Connector

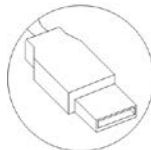

USB “A” Connector



Descripción del Producto

La interfase USB *Interface Plus Reader* proporciona el vínculo de comunicación entre un monitor TempTale4 y un puerto estándar USB. La interfase es usada para descargar los datos de tiempo-temperatura grabados por el monitor a su computadora para observación, análisis y archivado.

Requerimientos Mínimos del Sistema

- Computador con Microsoft Windows Requisitos 2000 Professional (Paquete de servicio 4 o mayor) o XP Professional (Paquete de Servicio 2 o mayor)
- Unidad de CD-ROM
- Puerto USB
- Una o mas de las siguientes aplicaciones de Sensitech:
 - TempTale Manager Desktop
 - ColdStream Cold Chain Manager Enterprise

Conexión de la interfase *USB Interface Plus* e instalación del controlador USB

1. Inserte el CD del *USB Interface Plus* en la unidad de CD-ROM.
2. Conecte el extremo “B” del cable USB al *USB Interface Plus*. (Ver primera imagen a la izquierda).
3. Conecte el extremo “A” del cable USB al puerto USB de su PC. (Ver segunda imagen a la izquierda).
4. En la pantalla del asistente de “Nuevo Hardware Encontrado” haga clic en “Siguiente”. (Ver tercera imagen a la izquierda).
5. Seleccione la opción “Búsqueda de controlador apropiado para componente (recomendado)” y haga clic en “Siguiente”.
6. Asegúrese que la opción de unidad de CD-ROM esté seleccionada y haga clic en “Siguiente”.
7. En la pantalla de “Controlador de Componente Encontrado” haga clic en “Siguiente”.
8. Haga clic en “Finalizar” en la pantalla de “Nuevo Componente de Hardware Encontrado”.
9. Usted verá el mensaje “Nuevo Hardware Encontrado” nuevamente.
10. Repita los pasos 4 al 8 para instalar el 2do archivo requerido para la operación del *USB Interface Plus*.
11. El *USB Interface Plus* estará listo para usarse.