

VizComm™ F4

Activation Guide



sensitech.com



Sensitech Inc. • 800 Cummings Center, Suite 258X • Beverly, MA 01915 • 1-800-843-8367 • +1-978-927-7033 • Fax 978-921-2112 • clientservices@sensitech.com

Sensitech EMEA • Tel: +31 (0)252 211 108 • Fax: +31 (0)252 231 032 • info@sensitech.eu


© 2017 Sensitech Inc. All Rights Reserved.

T83006675 Rev. A • 14 Jul 2017

VizComm™ F4 Bundle Activation Guide

Activating the VizComm F4

1. Locate the loose red/black lead from the battery.
2. Locate the loose red/black lead from the Tracking device.
3. Match the orientation of the connectors and attach.
*F4 will activate with battery power. (Solid **GREEN** lights, followed by 4 flashes, then out)*
4. Tuck leads into case and then close case (make sure leads are not being pinched when closing).

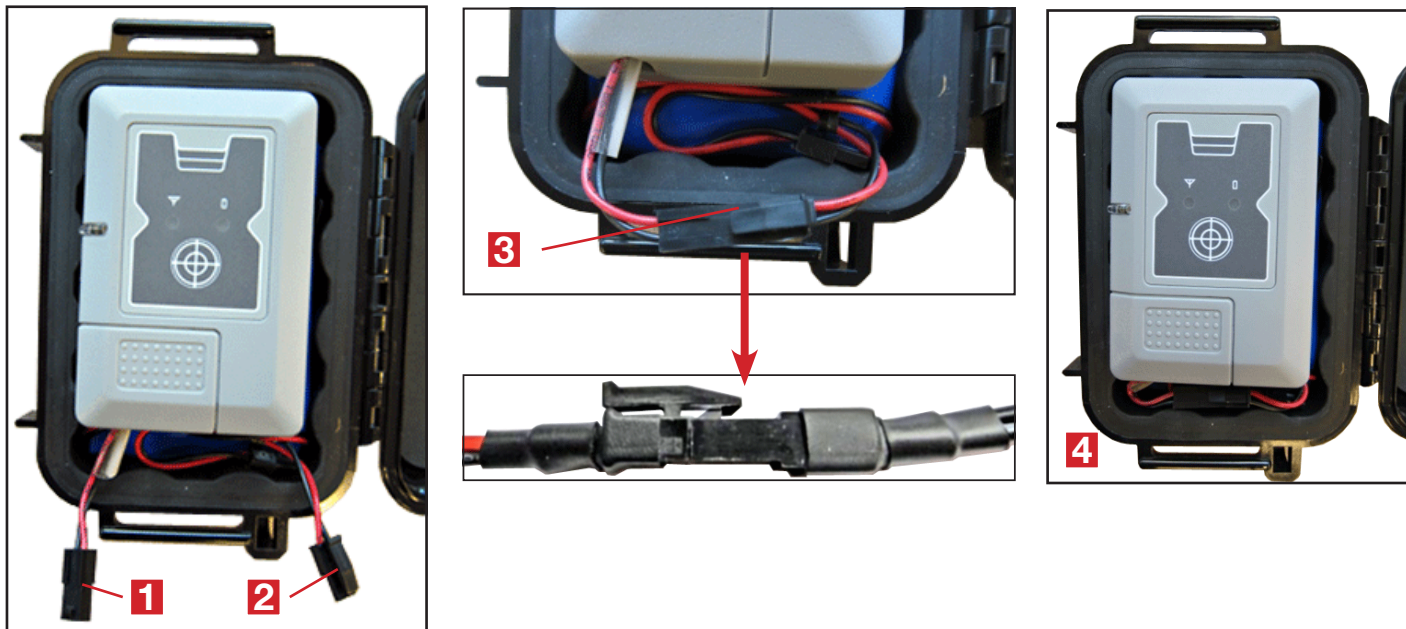

Turning On the VizComm F4

1. Power on by lightly pressing then releasing the crosshairs button (A).
2. LED Lights (B) will be solid **GREEN** for 4 seconds then will flash indicating the device is powered up.

Turning Off the VizComm F4

1. Power off by pressing the crosshairs button for 4 seconds.
2. LED lights will flash **RED**. Release button as device powers off (3-5 seconds.)

Check Status

Tap the crosshairs button to check cell signal strength (C) and battery (D). If the LED lights display solid **GREEN** then flash 4 times, the device was powered off and is now on.

GREEN — >90% battery left

AMBER — 50-90% battery left

RED — < 50% battery left

